

French Door Furniture

Centre Door Knobs

Door Knob Set
0777

Door Knob Set Crank Handle
0777

Door Knob Set
0776

Door Furniture
0778

Door Furniture
0779

Door Furniture
0780

CODE	H	W	Ø	ØR	PROJ
0776	•	•	45	43	50/50
0777	•	•	30/45	43	50/50
0778	100	70	•	•	32
0779	100	70	•	•	32
0780	100	70	•	•	32
7777	•	•	43	43	41/41

Georgian Knob
0805
0805-75

Octagonal Knob
3010CD

18 Lobe Knob
9570

Federation Knob
0079

Knob
0078

Knob
3001CD

Art Deco Knob
6053

Regency Knob
0905

CODE	Ø	ØR	PROJ
0078	66	81	80
0079	78	83	84
0805	65	80	90
0805-75	75	80	90
0905	77	82	90
1533	65	75	65
6053	88x50	106x68	73
3001CD	68	76	84
3010CD	70	70	81
9570	65	75	75

Espagnolette Door & Window Furniture

Half Mid Keeper
1157

Top Keeper
1155

Espagnolette Lever Set
One Way
1150LH/RH
Two way
1152LH/RH

CODE	H	W	Ø	PROJ
1150LH/RH	140	40	•	85
1151LH/RH	140	40	53	90
1152LH/RH	140	40	•	85
1170LH/RH	140	40	•	85
1171LH/RH	140	40	53	90
1173LH/RH	140	40	•	85
11190	40	24	•	22

Espagnolette Knob Set
One Way
1151LH/RH

Full Mid Keeper
1156

Regency Espagnolette Knob Set
1171LH/RH

BOLT CODE	BOLT SIZE
1154	1200
1161	1500
1162	1800
1163	2400
1164	900

All bolts are polished not lacquered

All Knob and Lever Sets contain, Lever or Knob Mechanism, 2 Full Keepers, 2 Half Mid Keepers and all screws.

Regency Top Keeper
1175

Flat Keeper
1158

Regency Half Mid Keeper
1177

Espagnolette Rod Fastener
1190

Angle Keeper
1159

Universal Keeper
1160

Regency Espagnolette Lever Set
One way
1170LH/RH
Two way
1173LH/RH

Regency Full Mid Keeper
1176

Lever Handle operates upward to open. Two Way indicates operation from both inside and outside.



Regency Oval Covered Escutcheon
 ■ 1012



Oval Escutcheon
 ■ 1012V



Vaughan Victorian Escutcheon
 ■ 1017



Euro Escutcheon
 ■ 2030



Georgian Round Covered Escutcheon
 ■ 2009R



Oval Covered Escutcheon
 ■ 1012VC



Victorian Escutcheon
 ■ 1018



Euro Escutcheon
 ■ 2031



Reeded Covered Escutcheon
 ■ 3001



Regency Round Escutcheon
 ■ 1014



Regency Round Covered Escutcheon
 ■ 2008



Euro Escutcheon
 ■ 2032



 
Round Escutcheon
 ■ 3013



Georgian Round Escutcheon
 ■ 1015



Georgian Oval Covered Escutcheon
 ■ 20090



Euro Escutcheon
 ■ 2033



Round Covered Escutcheon
 ■ 3013C



Covered Escutcheon
 ■ 1016



Art Deco Covered Escutcheon
 ■ 6019

CODE	H	W	Ø	PROJ
1012	40	22	•	•
1012V	40	22	•	•
1012VC	40	22	•	•
1014	•	•	39	•
1015	•	•	39	•
1016	60	20	•	•
1017	90	55	•	•
1018	81	45	•	•
2008	•	•	32	•
20090	40	22	•	•
2009R	•	•	32	•
2030	67	32	•	8
2031	•	•	50	5.5
2032	•	•	42	•
2033	45	35	•	•
3001	•	•	32	•
3013	•	•	32	•
3013C	•	•	32	•
6019	40	20	•	•

Privacy Assemblies & Indicator Bolts



Privacy Emergency Assembly
 ■ 0198



Privacy Emergency Assembly
 ■ 0200



Privacy Emergency Assembly
 ■ 0195



Privacy Emergency Assembly
 ■ 0201



Art Deco Flush Door Furniture
 ■ 0392



Privacy Emergency Assembly
 ■ 0199



Turn Button Assembly
 ■ 0200A



Privacy Spindle
 ■ 0203



Squash Court Flush Ring
 ■ 0394

CODE	H	W	D	BS	ØR	PROJ
0195	12	30	•	•	•	15
0198	•	•	•	40	36	30
0199	•	•	•	•	36/32	38
0200	•	•	•	•	43	8
0200A	•	•	•	•	43	20
0201	•	•	•	•	•	23/10
0202	•	•	•	•	25	17/15
0202A	•	•	•	•	25	20
0203	•	85	•	•	•	•
0392	73	73	10	•	•	•
0394	62	62	5	•	•	•
1925	40	75	•	•	60	35
1926	43	73	•	•	•	28
1928	38	64	•	•	•	15



Privacy Emergency Assembly
 ■ 0202



Indicator Bolt
 ■ 1928



Turn Button Assembly
 ■ 0202A



Indicator Bolt
 ■ 1925



Indicator Bolt Improved
 ■ 1926

Flush Pulls - Cabin Hooks



Flush Pull Round

1267



Flush Pull Concealed Fix

1271



Georgian Flush Pull

1266-4
1266-5
1266-6



Cabin Hook/Silent Pattern

1274
1275
1276
1278



Flush Pull

1265-4
1265-5
1265-6



Door Edge Flush Pull

1269



Georgian Flush Pull Round

1268



Sliding Door Pull

1272



Gravity Drop Sliding Door Pull

1270



Privacy Sliding Door Pull

1250



Cavity Sliding Door Pull

1252



Sliding Door Latch


1254

Cabin Hook

1282
1283
1284
1286
1288
1290

CODE	H	W	PROJ
1250	82	58	•
1252	82	58	•
1254	118	25	18
1265-4	100	33	•
1265-5	125	47	•
1265-6	150	50	•
1266-4	100	41	•
1266-5	125	50	•
1266-6	150	55	•
1267	125	50	•
1268	125	50	•
1269	125	30	•
1270	115	27	•
1271	100	50	•
1272	97	18	•
1274	•	100	20
1275	•	125	20
1276	•	150	20
1278	•	200	20
1282	•	50	18
1283	•	75	20
1284	•	100	20
1286	•	150	25
1288	•	200	25
1290	•	250	27

Screen Door Latches & Accessories

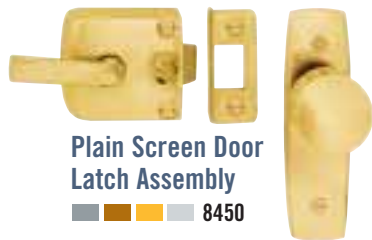

Plain Screen Door Latch Assembly

8450



Fancy Screen Door Latch Assembly

8451



Screen Door Latch Assembly

8449LH/RH
Left hand shown



Outward Opening Keeper

To suit 8449/8450/8451
8453



Roller Bolt

8300



Haps and Staple

9639
9640



Taylor Spindle

Drilled and tapped
9999A



Tie Fix Bolt

9999



Roller Bolt Rounded

8301



Slide Bolt

1960



Roller Catch

8305



Security Door Guard

9575



Security Door Guard

9580



Roller Stay Door Arrestor

0760

CODE	H	W	Ø	PROJ
0760	•	150	•	34
1960	18	65	•	•
8300	75	21	•	•
8301	75	21	•	•
8305	54	21	•	•
8449LH/RH	100/48	30/48	•	42/25
8450	100/48	30/48	•	42/25
8451	100/48	30/48	•	42/25
8453	45	18	•	18
9575	37	125	•	23
9580	45	22/112	•	25
9639	32	75	•	•
9640	34	100	•	•
9999	•	60/44	•	•
9999A	•	•	23	30

Knocker 4035

Knocker 4038

Narrow Knocker 4040

Regency Knocker 0918

Georgian Knocker 4039

Shell Knocker 4034

Knocker 4033

CODE	H	W	PROJ
0918	200	100	35
4033	195	92	35
4034	190	80	30
4035	190	100	35
4038	210	95	25
4039	205	100	35
4040	185	60	17

Lion Head Knocker 4037

Medusa Knocker 1598

Small Lion Head Knocker 4032

Ring Knocker 0807

Ring Knocker 4041

Doctors/Rye Knocker 1486

Doctors/Rye Knocker 4036

Georgian Knocker 0806

Art Deco Knocker 6050

Regency Knocker 1011

CODE	H	W	ØR	PROJ
0806	165	45	•	45
0807	110	85	55	40
1011	165	33	50	45
1486	165	45	55	45
1598	180	125	•	50
3027	195	50	•	45
4032	110	80	•	26
4036	175	75	60	60
4037	200	115	•	45
4041	135	110	65	45
6050	153	36	•	35

Push Plates

CODE	H	W	PROJ
0172	375	65	7
0912	305	62	7
2012	305	75	7
3022E	304	76	7
3022P	304	75	7
6045	309	64	7
8195	300	75	7
8196	200	50	7

Victorian Finger Plate 8195

Victorian Finger Plate 8196

Finger Plate 0172

Regency Finger Plate 0912

Georgian Finger Plate 2012

Edged Finger Plate 3022E

Finger Plate Plain 3022P

Art Deco Finger Plate 6045

Door Pulls

Door Pull
0169



Fleur De Lis Pull
0171LH/RH



Tulip Pull
0173LH/RH



Door Pull
0441



Georgian Door Pull
2011
2011-10



Offset Door Pull
2862



Door Pull
0150



Door Pull
0166



Door Pull
0408



Door Pull
2861



Regency Door Pull
1007



Art Deco Door Pull
6041



Door Pull
0112
0113



Georgian Door Pull
2010
2010-6
2010-8



Door Pull
1005
1006



Door Pull
2860

CODE	H	W	ØR	PROJ
0112	200	•	55	55
0113	150	35	•	45
0150	160	45	•	35
0166	220	20	•	53
0169	300	50	•	63
0171LH/RH	375	40	•	45
0173LH/RH	375	40	•	45
0408	250	41	•	45
0441	375	45	•	70
1005	150	•	45	40
1006	200	•	45	56
1007	240	•	40	55
2010	250	•	45	65
2010-6	150	•	35	52
2010-8	200	•	38	60
2011	300	•	55	55
2011-10	250	•	45	45
2860	250	•	45	55
2861	235	44	•	60
2862	235	44	•	55
6041	305	65	•	45

Door Bells



Art Deco Bell Button and Surround
6052/100

CODE	H	W	Ø	PROJ
0098	95	40	•	30
0099	90	33	•	30
0100	•	•	15	•
0101	•	•	75	45
0102/100	•	•	60	•
0103/100	•	•	60	•
0133	•	•	110	35
0134	•	•	110	35
0808/100	•	•	57	•
1582-3/100	75	75	•	•
1582-4/100	100	100	•	•
2014/100	•	•	57	•
6052/100	65	31	•	•



Victorian Bell Pull Assembly
0133



Hexagonal Bell Pull Assembly
0134



9.5 Volt Battery Bell Button
Sold Separately
0100



Turn Bell Mechanism only
0101



Edwardian Bell Button and Surround
0102/100



Victorian Bell Button and Surround
0103/100



Georgian Bell Button and Surround
0808/100



Bell Push Button and Surround
2014/100



Fancy Turn Bell Front
0099



Bell Button and Surround
1582-3/100
1582-4/100



Plain Turn Bell Front
0098